

HC3

STEREO GAMING HEADSET

HC3UNI

IMPORTANT : To help ensure risk-free operation please read these Operational and Safety Guidelines before use:



Before using the headset, turn the volume down to a mid-level or very low, then slowly adjust it to a comfortable level. Exposure to high volume sound levels may cause temporary or permanent damage to your hearing. You should always set your volume to moderate levels and avoid long exposure to high volume levels.



Please help to conserve the environment by recycling the cardboard packaging of this product.



This product should NOT be disposed of in normal household waste. It should be disposed of separately. Please take it to an electrical waste collection point.


- Contains small parts. Not suitable for children under 7 years of age.
- Store in a dry & dust free area.
- Do not store in areas of extreme low (0°C) or high (40°C) temperatures.
- Avoid direct sunlight and heat sources.
- Do not allow the product to get wet or dirty; doing so may cause damage.
- Do not clean with benzene, paint thinner, acetone, alcohol, or other such solvents.
- Do not take the product apart; doing so will void your warranty and may cause electrical shock or damage to internal components.

For help with the set-up or operation of this product please go to :


giotek.com/contact-support

PARTS LIST


- i) Headset
- ii) Inline Controls
- iii) Xbox 360™ Cable (2.5-2.5mm Aux Cable)
- iv) RCA to 3.5mm Headphone Adapter
- v) USB Cable
- vi) RCA to Audio Cable

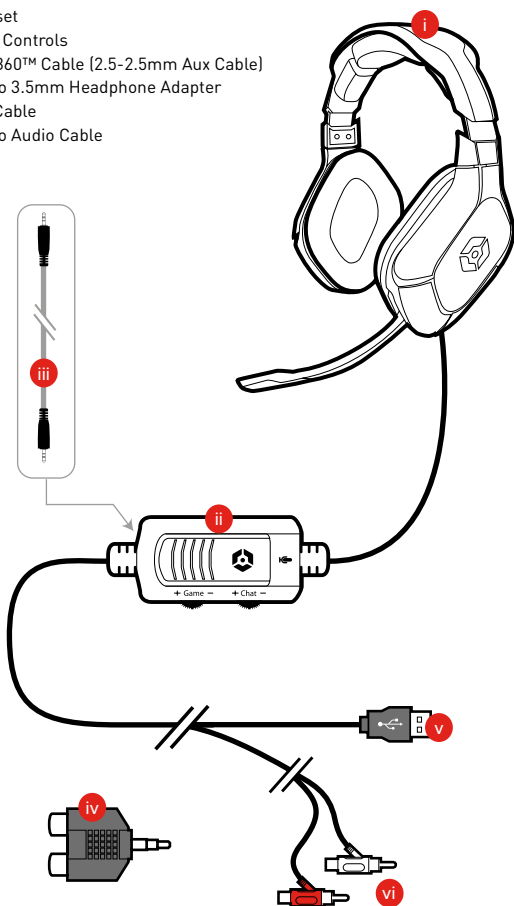


CONTROLS

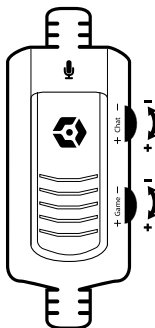

**GAME/CHAT
VOLUME CONROLS**

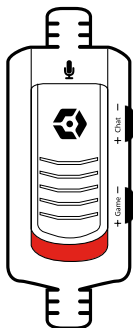

**MIC OFF
(MUTE ON)**

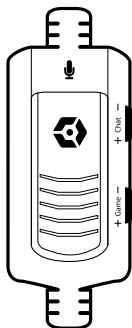

**MIC ON
(MUTE OFF)**

TV/MONITOR AUDIO OUT

Not all TV/Monitors have Left & Right Audio Out.

Look on the back of your TV/Monitor and see if it has a Headphones Out socket you can use instead.


You can connect your headset by using the Headphones Out socket by using the RCA to 3.5mm adapter included.




1A) XBOX 360™/PS3™ SETUP

Use this set-up if your TV has HDMI and Audio Out

- Chat is by USB (PS3™) - via the 2.5-2.5mm Aux cable (Xbox 360™)
- Game Sound is via TV

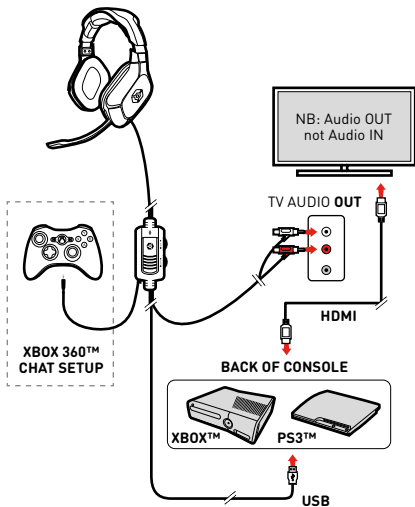

 Please refer to Page 3 about TV/Monitor Audio Out Sockets

XBOX™ CHAT

- 1) Settings > Preferences > Voice > Voice Output > Play through Headset.
- 2) Test the microphone : Messages > Create New > Message > Choose the name of a friend > Add Voice > Do a test recording.


PS3™ CHAT

- 1) Settings > Accessory Settings > Audio Device Settings > Choose the Giateck HC3 Stereo Headset as INPUT & OUTPUT.
- 2) You may want to increase/decrease the sensitivity of the microphone.

2A) PS3™ SETUP

Use this set-up if your TV has HDMI but no Audio Out

- Chat is via USB
- Game Sound is via RCA

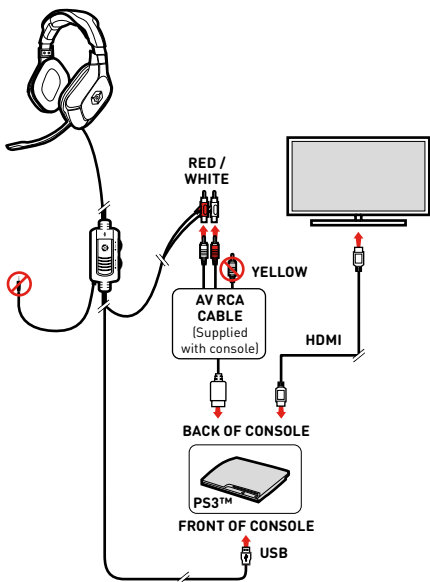


PS3™ CHAT

- 1] Settings > Accessory Settings > Audio Device Settings > Choose the Gioteck HC3 Stereo Headset as INPUT & OUTPUT.
- 2] You may want to increase/decrease the sensitivity of the microphone.
- 3] Settings > Sound Settings > Audio Output Settings then choose Audio Input Connector/ Scart / AV Multi.

2B) XBOX 360™ SETUP

Use this set-up if your TV has HDMI but no Audio Out

- Chat is via USB
- Game Sound is via RCA

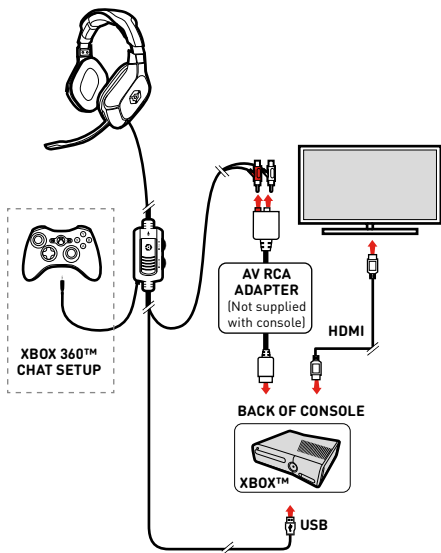

! IMPORTANT: Depending on the age of your console, you may need to purchase the AV RCA Adapter for this setup. The AV cable supplied with some models of the Xbox 360™ does not allow for simultaneous use with a HDMI cable, as the shape of the AV connector covers the HDMI socket.


XBOX™ CHAT

- 1) Settings > Preferences > Voice > Voice Output > Play through Headset.
- 2) Test the microphone : Messages > Create New > Message > Choose the name of a friend > Add Voice > Do a test recording.

3) XBOX 360™/PS3™ SETUP

Use this set-up if your TV has No HDMI

- Chat is via USB (PS3™) - via 2.5-2.5mm cable (360)
- Game Sound via RCA

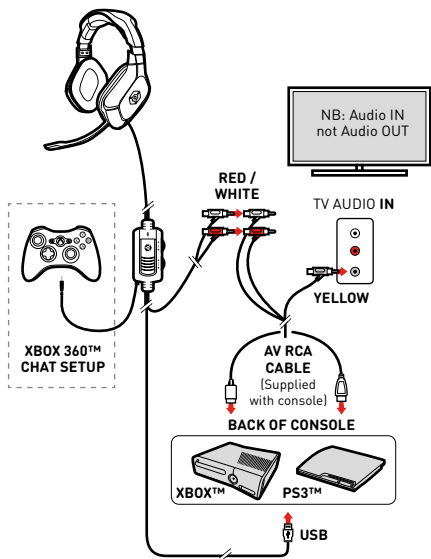

XBOX™ CHAT

- 1) Settings > Preferences > Voice > Voice Output > Play through Headset.
- 2) Test the microphone : Messages > Create New > Message > Choose the name of a friend > Add Voice > Do a test recording.


PS3™ CHAT


- 1) Settings > Accessory Settings > Audio Device Settings > Choose the Gioteck HC3 Stereo Headset as INPUT & OUTPUT.
- 2) You may want to increase/decrease the sensitivity of the microphone.
- 3) Settings > Sound Settings > Audio Output Settings then choose Audio Input Connector/ Scart / AV Multi.

4A) PS4™ SETUP

Use this set-up to have independent Game & Chat

- Chat is via USB
- Game Sound via TV

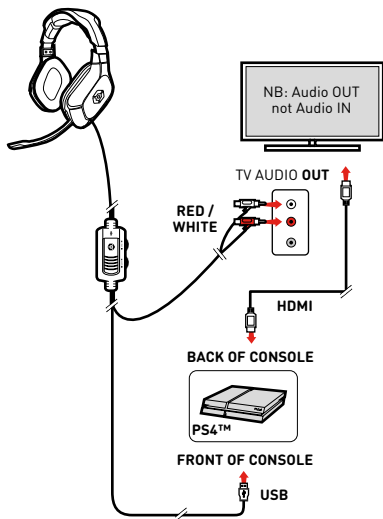

 Please refer to Page 3 about TV/Monitor Audio Out Sockets


This setup supports independent game/chat controls.

The PS4 allows you to select which sound outputs via the controller:
Settings > Devices > Audio Devices and set the headset to **'All Audio'**, adjust the volume on the headset and set the sensitivity of the microphone. Test the microphone's function and click on OK before leaving. Do not enter a game before setting the microphone and game sounds.

4B) PS4™ SETUP

Use this set-up if your TV has no Audio Out

- Chat & Game Sound are via USB

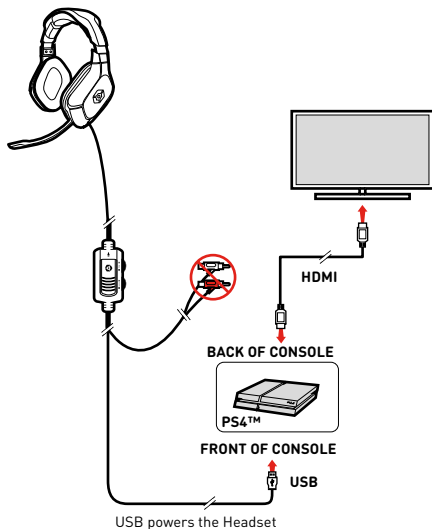

- This setup will not have independent game/chat controls. Both are controlled by the chat volume control

The PS4 allows you to select which sound outputs via the controller: **Settings > Devices > Audio Devices** and set the headset to **'All Audio'**, adjust the volume on the headset and set the sensitivity of the microphone. Test the microphone's function and click on OK before leaving. Do not enter a game before setting the microphone and game sounds.

5A) XBOX ONE™ SETUP

Use this set-up if your TV has Audio Out

- Chat is via Controller
- Game Sound via TV



! Please refer to Page 3 about TV/Monitor Audio Out Sockets


- 1] Connect the chat cable (supplied) between the inline control box and the adaptor cable supplied with Microsoft Headset Stereo adapter. Insert the jack with 3 black bands into the headset's socket.
- 2] To avoid phasing (simultaneous game sound via controller and TV), you will need to turn Game sound OFF via the Microsoft® Stereo Headset Adapter (see Headset Adapter instructions).


Benefits of this setup: User can control the Game and Chat volume independently via the headset controls. Game sound will be louder.

5B) XBOX ONE™ SETUP

Use this set-up if your TV has no Audio Out

- Chat is via Controller
- Game Sound via TV

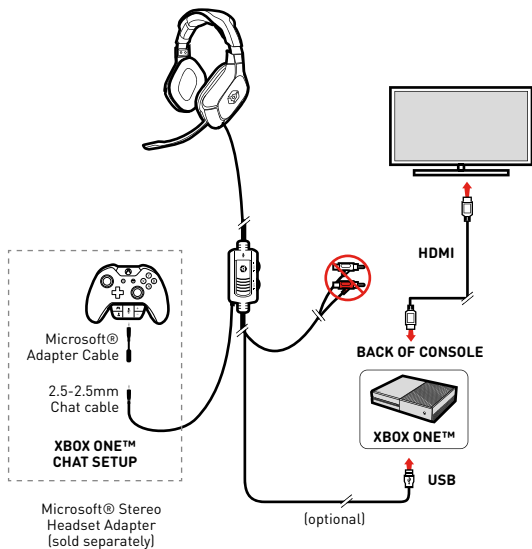


 Please refer to Page 3 about TV/Monitor Audio Out Sockets

Connect the chat cable (supplied) between the inline control box and the adaptor cable supplied with Microsoft Headset Stereo adapter. Insert the jack with 3 black bands into the headset's socket.

Benefits of this setup: User can control the Game and Chat volume independently via the headset controls. Game sound will be louder.

6) PC/MAC SETUP

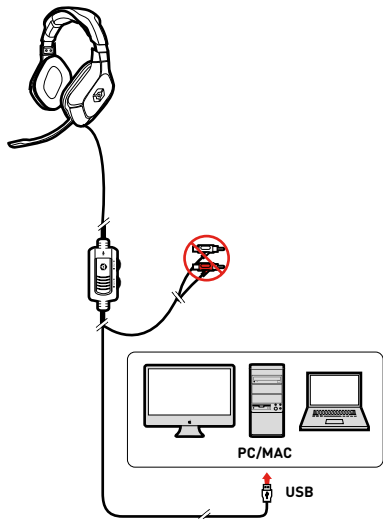

PC

- 1] Sound > Start > Control Panel > Hardware and Sound > Manage Audio Devices.
- 2] On the Playback and Recording tabs select 'Giateck HC3 Stereo Headset' as default.
- 3] You may also need to set the headset as default in the application you are using.

MAC

- 1] System Preferences > Sound.
- 2] Set Input and Output 'Giateck HC3 Stereo Headset'.
- 3] You may also need to set the headset as default in the application you are using.

Independent Chat/Game controls are not available for PC/Mac unless you buy 3rd party software.

WARRANTY

This product is covered by a one [1] year warranty.
For full Terms and Conditions, and for Technical Assistance, go to :
giotek.com/contact-support

Australia only

This product is manufactured by GoodBetterBest ("GBB") of the United Kingdom. Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure. GBB warrants to the original consumer purchaser that the product will be free of defects in materials and/or workmanship for the length of time specified in the warranty period from the date of purchase, this being 1 Year, as set forth at : www.giotek.com/contact-support

If a defect covered by this warranty occurs during the warranty period, GoodBetterBest at its option will repair or replace, at no charge, any part that GoodBetterBest determines to be defective. To make a warranty claim please contact GBB's Australian distributor, Turn Left Distribution at : helpdesk@turnleft.biz Turn Left Distribution is responsible for the servicing of warranty claims for purchases made in Australia. The purchaser will be required to bear the expense of sending the product back to the Australian distributor to claim the warranty. If you are unable to satisfactorily resolve your issue with the retailer, please contact GBB through its website at : www.giotek.com/contact-support or alternatively, you can contact GBB directly at: GBB Limited, 103 Devonshire Business Centre, Works Road, Letchworth, SG6 1GJ, United Kingdom.

This warranty shall not apply if the product has been damaged by abuse, misuse, negligence, accident, modification, tampering or by any causes unrelated to defective materials and/or workmanship. Repair or replacement as provided under this warranty is GoodBetterBest exclusive prerogative. In order to obtain warranty services under certain circumstances (particularly when the retailer will not accept the return of the defective product), you may be required by GBB to return the product directly to GBB in the United Kingdom for inspection and evaluation, along with evidence of purchase (including the price paid and the date the item was purchased), for a determination of whether the warranty applies. If you have been asked by GBB to return the product to GBB in the United Kingdom, and the product is defective and covered under the applicable warranty period, GBB shall provide the appropriate warranty services. If the warranty does not apply (either due to misuse, damage, negligence, etc., or because the warranty period has expired), you may be charged to return the product to you (if you instruct us to do so). Any applicable implied warranties, including warranties of merchantability and fitness for a particular purpose are hereby limited to the length of time specified in the warranty periods below, beginning from the date of purchase and are subject to the conditions set forth in this limited warranty.

In no event shall GoodBetterBest be accountable for incidental damages resulting from the breach of any express or implied warranties. You may have different or additional legal rights, including longer warranty periods, which vary from jurisdiction to jurisdiction. Some jurisdictions do not allow certain limitations on how long an implied warranty lasts, so the above limitations may not apply to you. In addition, consumers have legal rights under applicable national legislation governing the sale of consumer goods. Such rights are not affected by the warranties set forth herein, except to the extent allowed by law.

LEGALS

This product complies with the following legal regulations.
For further information go to www.gioteck.com

This device complies with Industry Canada RSS 210 standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Caution: The user is cautioned that changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. However, there is no guarantee that interference will not occur in a particular installation. The device and its antenna must not be co-located or operating in conjunction with any other antenna or Dongle. Gioteck are not responsible for any interference caused by un-authorized changes to this equipment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed correctly, may cause harmful interference to radio communications. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. If this equipment does cause harmful interference to radio/television reception try the following:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. End user must follow the specific operating instructions for satisfying RF exposure compliance. This Dongle must not be co-located or operating in conjunction with any other antenna or Dongle.

Gioteck hereby declares that this product is in compliance with the essential requirements and other provisions of Directive 2004/108/EC and R&TTE 1999/5/EC. To view the full version of the Declaration of Conformity go online to gioteck.com/declaration-of-conformity

Complies with
IDA Standards
DB100398



gioteck ™